




# PLATFORM ZERO INCIDENTS

SF20-45

## SAFETY FLASH: HOISTING (ON BOARD)

### GOOD PRACTICE

- ✔ Carry out a visual inspection of the crane and materials before starting with hoisting activities.
- ✔ Only use certified hoisting materials.
- ✔ Make sure that the load is well balanced.
- ✔ Stay (as much as possible) out of the swivel range.
- ✔ Only let (evidential) instructed personnel carry out the operation of the crane.
- ✔ Make sure that the maximum capacity of the hoist point is greater than the maximum capacity of the hoist.
- ✔ Make sure there is control over the load at any time.

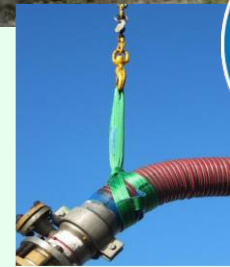

Always wear a helmet when around hoisting activities. Objects may fall out of or from the load.

Also be extra alert when a hose is coming on board and keep communication open with jetty personnel.



### BAD PRACTICE

- ✘ Stand under a load.
- ✘ Using materials not meant for hoisting.
- ✘ Needles presence in the swivel range of the crane and/or in the blind spot of the operator of the crane.
- ✘ Lifting a greater load than the maximum indicated on the hoisting material.
- ✘ Not having any communications between operator and work area.
- ✘ Not taking into account the weather conditions.

### ACTION QUESTIONS:

- Which hoisting materials do we have on board and how do we check them?
- How do we communicate during hoisting activities? Radio, gestures, etc.
- Did everyone receive sufficient instruction to operate the crane?

**Disclaimer:** The information in this document was drawn up with the highest possible accuracy. However, the Platform Zero Incidents and its participants cannot be held liable in any way for its content. Adopting measures, suggestions, warnings, etc. must therefore always be preceded by weighing up and risk assessment. Spreading this document among third parties is allowed provided that this is done in the original form.

